


- Install steps:
- 1. Please charge battery at least 8 hours before first-time use.
- 2. Turn off power switch before charging. Charging indicator shall lights on RED when charging the battery, the indicator will turn to GREEN color while finished.

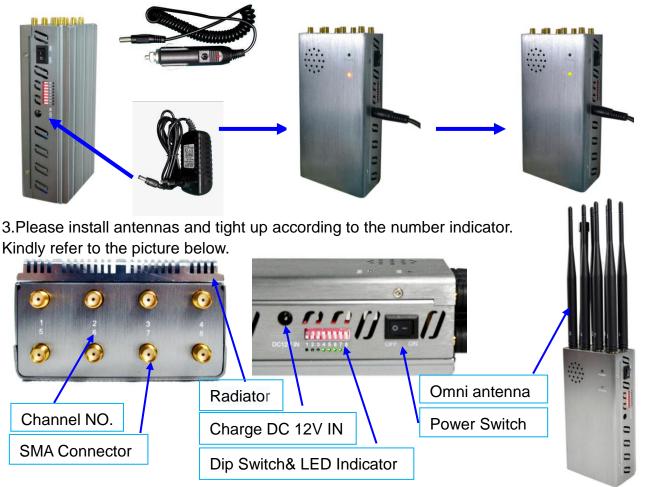


4. Turn on the power switch and the Power LED shall light in Green and the LED of each band will turn on too.

5. Don't suggest to use while charging, otherwise the machine will be damaged, because temperature may too high about 7 5 ° C

Function Introduction:

- Each band could be chosen operating or not.
- 1. Find the dip switch on the side of the device as below picture.

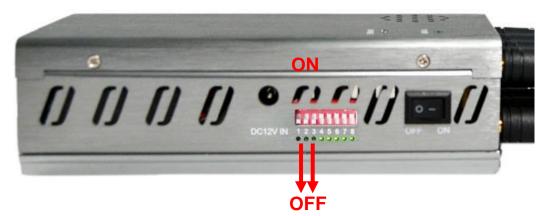

The number indicators are corresponding to the number of antennas, LED turns on which indicate operating.

- 2. Eight arrows toward from OFF to ON (default), by dip switching ON \rightarrow OFF, each band could be disable.
- 3. The corresponding LED indicator shall be turn off.

Notice:

- 1. Do not power on if antennas are not connected one by one.
- 2. The functional coverage is greatly affected if antennas are not installed correctly. Do ensure the antennas are properly connected before usage.
- 3. When power on, keep away from computer, notebook PC, television, audio and AM/FM radio to prevent interferences.
- 4. The normal operational temperature is about 45-60° C. If the temperature is higher than the above, turn off the power immediately and contact local agent for help.
- 5. Its functional coverage will depend on the location and strength of the ambient mobile phone base stations.
- 6. Placing the device on higher position for better coverage. 2 meters height is recommended.
- 7. The Ni-MH rechargeable battery has estimated 500 times recharge cycles. Please contact the local agent to replace battery if it is not rechargeable.